

Lesson 5 Offline Running


1. Purpose

MaxArm can be controlled to execute action by pressing offline running button instead of PC software control.


2. Operation Steps

- 1) Connect adapter, and connect MaxArm to computer with USB cable. Then turn on MaxArm and open PC software.
- 2) Open an action group file (5.Appendix/1.MaxArm Action Group File) and import No.2 action group file as example.
- 3) Select “100” action group number and click “Download”.

Note: No.100 action group has been set as an offline running action group by default. Other action group numbers are invalid.

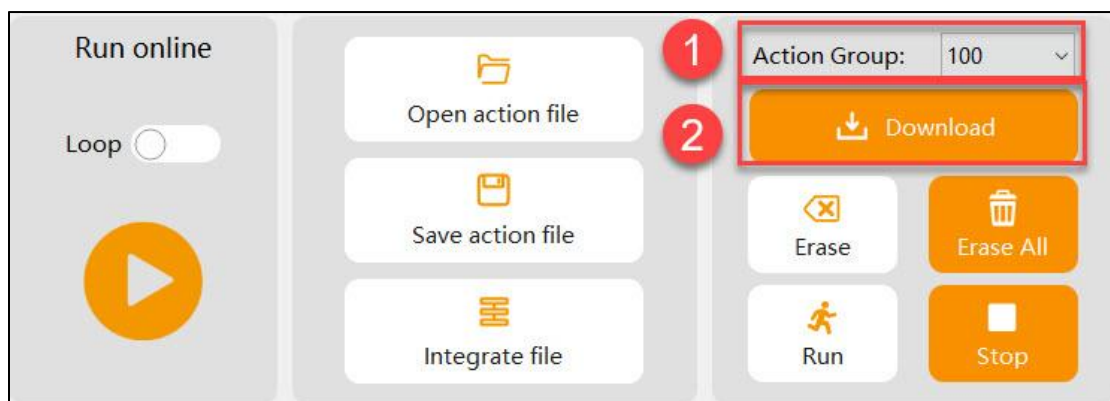

- 4) After downloading action, the prompt will pop up.

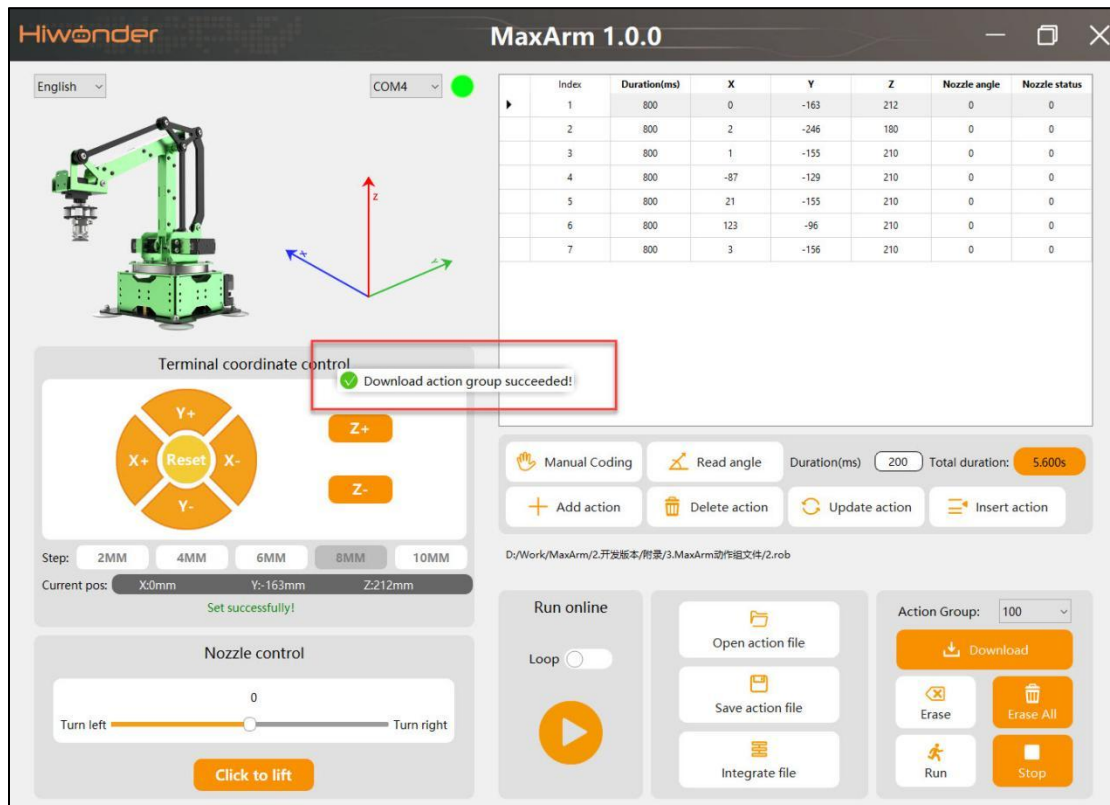

5) Turn on MaxArm and press the elastic button on expansion board to run No.100 action group. The button position is circled in the following image:

